How to install monitor driver for Windows 7

1. When the display is connected to the PC, the [Display Settings] screen automatically appears. Click **Advance settings**.

00- ¤ «	All Control Panel Items + Display + Screen Resolution + 47 Search Control Panel P				
File Edit View	Tools Help				
	Change the appearance of your displays				
	Another display not detected Identify				
	Display: 1. SX-17P DVI 🔹				
	Resolution: 1280 × 1024 (recommended)				
	Orientation: Landscape 💌				
	Advanced settings				
Make text and other items larger or smaller					
	What display settings should I choose?				
	OK Cancel Apply				

NOTE: In case the [Display Settings] screen does not appear, click **Start** > **Control Panel** > **Display** > **Change display settings**.


2. Click the Monitor tab, and then click Properties.

Generic PnP Monitor and ATI Radeon HD 4300 Series Properties				
Adapter Monitor Troubleshoot Color Management				
Generic PnP Monitor				
Monitor Settings				
<u>S</u> creen refresh rate: 60 Hertz ▼				
monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware.				
<u>C</u> olors: True Color (32 bit) ▼				
OK Cancel Apply				


3. Click the Driver tab, and then click Update Driver.

Generic PnP Monitor Properties				
General Driver Details				
Generic PnP Monitor				
Driver Provider: Microsoft				
Driver Date: 6/21/2006				
Driver Version: 6.1.7600.16385				
Digital Signer: Microsoft Windows				
Driver Details To view details about the driver files.				
Update Driver				
Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver.				
Disable Disables the selected device.				
Uninstall To uninstall the driver (Advanced).				
OK Cancel				


4. Click Browse my computer for driver software.

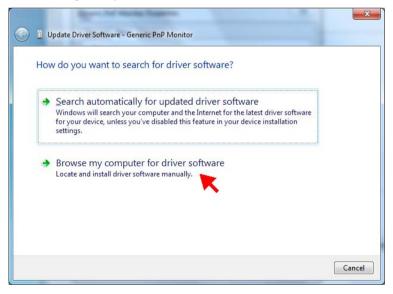


5. Click Let me pick from a list of device drivers on my computer, and then click Next.

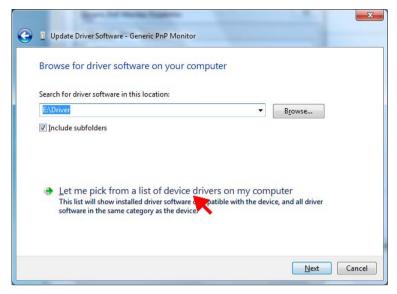

6. Click Have Disk.

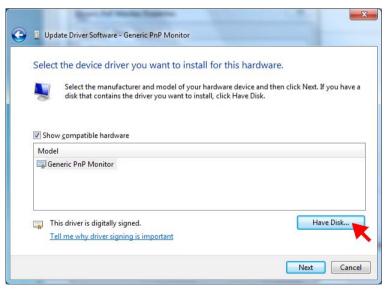

7. Click Browse.

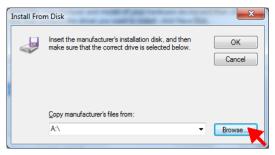

8. Browse the CD-ROM for the **Driver** folder, and select the driver file of your monitor model. Click **Open**.

Locate File		-	-		×
Look in:	🔒 Driver		•	G 🤌 🖻 🛄	
Recent Places	Name SX-17P.inf SX-19P.inf			Date modified 1/29/2010 11:49 AM 1/29/2010 12:04 PM	Type Setup Infc Setup Infc
Computer	1				,
Network	File <u>n</u> ame: Files of <u>type</u> :	*.inf Setup Information (*.inf)		• •	Open Cance

9. Click OK.




10. Click Next.

Update Driver Software - Generic PnP Monitor	
Select the device driver you want to install for the	nis hardware.
Select the manufacturer and model of your hardware disk that contains the driver you want to install, click	
☑ Show compatible hardware	
SX-17P (Digital)	
This driver is not digitally signed!	Have Disk
Tell me why driver signing is important	

11. A security message appears. Click Install this driver software anyway.



12. Click **Close** to complete driver update.

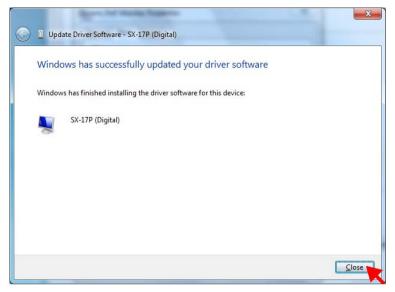

13. The new monitor model is now shown. Click **Close** to close the [Properties] screen.

SX-17P (Digital) Properties	×
General Driver Details	
SX-17P (Digital)	
Driver Provider:	AG Neovo Inc.
Driver Date:	1/29/2010
Driver Version:	1.0.0.0
Digital Signer:	Not digitally signed
Driver Details	To view details about the driver files.
Update Driver	To update the driver software for this device.
Roll Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.
<u>D</u> isable	Disables the selected device.
<u>U</u> ninstall	To uninstall the driver (Advanced).
	Close Cancel

14. Click **OK** to close the [Advanced Settings] screen.

SX-17P (Digital) and ATI Radeon HD 4300 Series Properties				
Adapter Monitor Troubleshoot Color Management				
Monitor Type				
SX-17P (Digital)				
Properties				
Monitor Settings				
Screen refresh rate:				
60 Hertz 👻				
<u> </u>				
Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware.				
True Color (32 bit)				

15. Click **OK** to close the [Display Settings] screen.

					_ _ ×
GO-	«	All Control Panel	tems Display Screen Resolution	👻 🍫 Search Control Panel	٩
<u>File E</u> dit <u>V</u>	/iew	<u>T</u> ools <u>H</u> elp			
		Change the a	ppearance of your display		
				Detect Identify	
		Di <u>s</u> play:	1. SX-17P (Digital) 🔻		
		Resolution:	1280 × 1024 (recommended)		
		Orientation:	Landscape 👻		
				Advanced setting	5
	Make text and other items larger or smaller				
		What display sett	ings should I choose?		
				OK Cancel Apply]