Comment faire pour installer le pilote de Windows 7 ?

1. Lorsque l'écran est connecté à un PC, l'écran [Paramètres d'affichage] apparaît automatiquement. Cliquez sur **Paramètres avancés**.

💽 🕞 - 📃 «	All Control Panel Items > Display > Screen Resolution - 47 Search Control Panel P
File Edit View	Tools Help
	Change the appearance of your displays
	Another display not detected [Jdentify]
	Display: 1. SX-17P DVI
	Resolution: 1280 × 1024 (recommended) -
	Orientation: Landscape 💌
	Advanced settings
	Make text and other items larger or smaller
	What display settings should I choose?
	OK Cancel Apply

NOTE : Si l'écran [Paramètres d'affichage] n'apparaît pas automatiquement, cliquez sur **Démarrer > Panneau de configuration > Affichage > Modifier les paramètres d'affichage**.

2. Cliquez sur l'onglet Moniteur, puis cliquez sur Propriétés.

Generic PnP Monitor and ATI Radeon HD 4300 Series Properties				
Adapter Monitor Troubleshoot Color Management Monitor Type				
Generic PhP Monitor				
Monitor Settings				
Screen refresh rate:				
60 Hertz 🗸				
Hide modes that this monitor cannot display				
Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware.				
<u>C</u> olors: True Color (32 bit) ▼				
OK Cancel Apply				

3. Cliquez sur l'onglet Pilote, puis cliquez sur Mettre à jour le pilote.

Generic PnP Monitor Properties					
General Driver Details					
Generic PnP Monitor					
Driver Provider:	Microsoft				
Driver Date:	6/21/2006				
Driver Version:	6.1.7600.16385				
Digital Signer:	Microsoft Windows				
Driver Details	To view details about the driver files.				
Update Driver	To update the driver software for this device.				
Roll Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.				
Disable	Disables the selected device.				
Uninstall	To uninstall the driver (Advanced).				
	OK Cancel				

4. Cliquez sur Rechercher un pilote sur mon ordinateur.



5. Sélectionnez Choisir parmi une liste de pilotes de périphériques sur mon ordinateur, puis cliquez sur Suivant.



6. Cliquez sur Avoir le disque.



7. Cliquez sur Parcourir.



8. Allez au dossier **Pilote** sur le CD-ROM et sélectionnez le fichier du pilote de votre modèle de moniteur. Cliquez sur **Ouvrir**.

🖳 Locate File		-		X
Look in:	\mu Driver	•	G 🤌 🖻 🛄	
Recent Places	Name SX-17P.inf SX-19P.inf	*	Date modified 1/29/2010 11:49 AM 1/29/2010 12:04 PM	Type Setup Infc Setup Infc
Desktop				
Libraries				
Computer				
Network	•			+
	File <u>n</u> ame: Files of <u>type</u> :	•.inf Setup Information (*.inf)	- -	Open Cance

9. Cliquez sur OK.



10. Cliquez sur Suivant.

🔵 👖 Upd	ate Driver Software - Generic PnP Monitor	
Select	the device driver you want to install for Select the manufacturer and model of your hardw disk that contains the driver you want to install, cli	this hardware. are device and then click Next. If you have a ck Have Disk.
Shov	v <u>c</u> ompatible hardware	
SX-	17P (Digital)	
<u>▲</u> Th <u>⊺e</u>	is driver is not digitally signed! Il me why driver signing is important	Have Disk
		Next Cancel

11. Un message de sécurité apparaît. Cliquez sur **Installer ce pilote quand même**.



12. Cliquer sur Fermer pour terminer l'installation du pilote.



13. Le modèle du nouveau moniteur s'affiche alors. Cliquez sur **Fermer** pour fermer l'écran [Propriétés].

SX-17P (Digital) Properties	5 ×
General Driver Details	
SX-17P (Digital)	
Driver Provider:	AG Neovo Inc.
Driver Date:	1/29/2010
Driver Version:	1.0.0.0
Digital Signer:	Not digitally signed
Driver Details	To view details about the driver files.
Update Driver	To update the driver software for this device.
Roll Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.
<u>D</u> isable	Disables the selected device.
<u>U</u> ninstall	To uninstall the driver (Advanced).
	Close Cancel

14. Cliquez sur **OK** pour fermer l'écran [Paramètres avancés].

SX-17P (Digital) and ATI Radeon HD 4300 Series Properties				
Adapter Monitor Troubleshoot Color Management				
Monitor Type				
SX-17P (Digital)				
Properties				
Monitor Settings				
Screen refresh rate:				
60 Hertz 🔹				
✓ Hide modes that this monitor cannot display				
Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware.				
Colors:				

15. Cliquez sur **OK** pour fermer l'écran [Paramètres d'affichage].

ĺ										x
\bigcirc	9-	5 «	All Control	Panel It	ems 🕨 Display 🕨 Screer	n Resolution	▼ 49	Search Control Panel		٩
<u>F</u> ile	<u>E</u> dit	View	Tools H	<u>H</u> elp						
			Change	the ap	opearance of your di	isplay			_	
						D.		Dete <u>c</u> t Identify		
			Di <u>s</u> play:		1. SX-17P (Digital) 🔻					
			<u>R</u> esolution	1:	1280 × 1024 (recommen	nded) 🔻				
			<u>O</u> rientatio	n:	Landscape 🔻					
								Advanced settings	;	
			Make text What displ	and oth lay setti	er items larger or smaller ngs should I choose?					
							OK	Cancel Apply		